


# 1 Parts description

Visit operation detail at Super B  
Website: <http://www.superbiketool.com/>,  
Click Product ➡ Chain tools ➡ 2. ➡ TB-3327

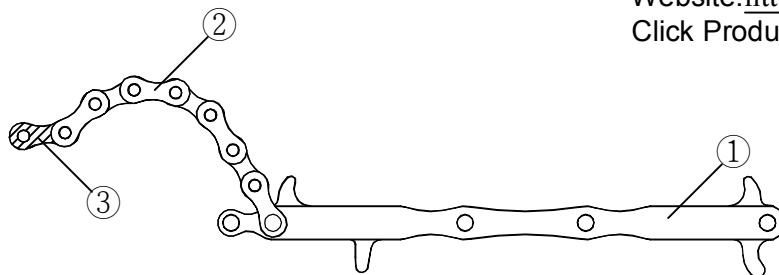

| NO | PART              | Q'TY |
|----|-------------------|------|
| ①  | Body              | 1    |
| ②  | Measurement chain | 1    |
| ③  | Test chain        | 1    |

# 2 Instruction

## 1.Chain hook

1-1. When using the TB-3327 as the chain hook for installing and uninstalling the chain, please use the body to hook up the chain. (see picture 1)

## 2.Chain checker

2-1. Place the TB-3327 body ① on the chain slightly. (see picture 2)

2-2. If the TB-3327 can be placed into the chain completely, replacing a new chain is suggested. (see picture 3)


2-3. If the TB-3327 can NOT be placed into the chain completely, the chain is still functional. (see picture 4)



(Picture 1)



(Picture 2)

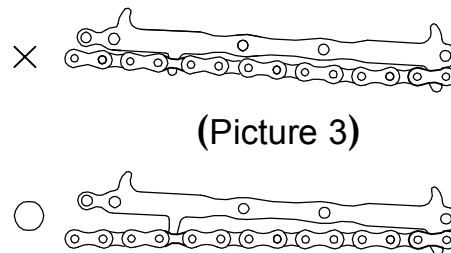

(Picture 3)

(Picture 4)

## 3. Freewheel checker


3-1. Place the TB-3327 body ① and measurement chain ② on each sprocket of freewheel to check the freewheel wear. (use on the sprocket between 12T~21T) (see picture 5)

3-2. Press the body ① (6Nm) in drive direction and swing the test chain ③ on the sprocket (see picture 5), there will be two situations as below.


3-2-1. If the test chain ③ can be swung into the tooth pocket, the sprocket is still functional. (see picture 6)

3-2-2. If the test chain ③ can NOT be swung into the tooth pocket, replacing a new sprocket is suggested. (see picture 7)


**!** If the measurement chain ② slides from the sprocket while the body ① is under pressure, the amount of wear is excessive, the sprocket should be replaced immediately. (see picture 8)

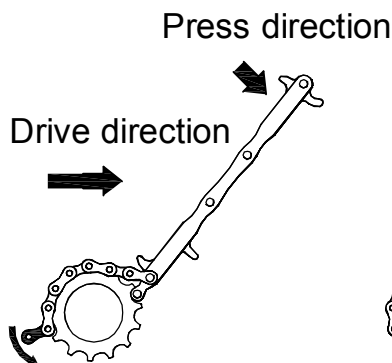


(Picture 5)

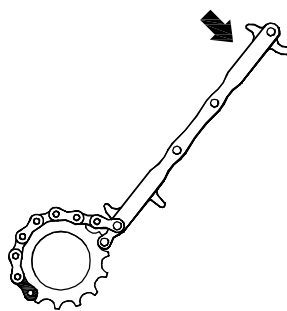

(Picture 6)

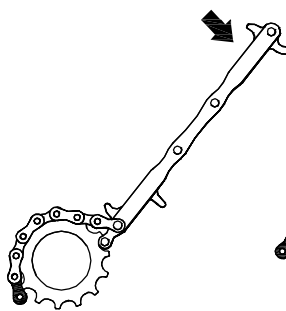

(Picture 7)

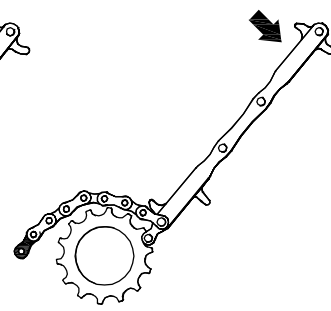

(Picture 8)