


RACEFACE

BOTTOM BRACKET INSTALLATION

BSA 30 THREADED

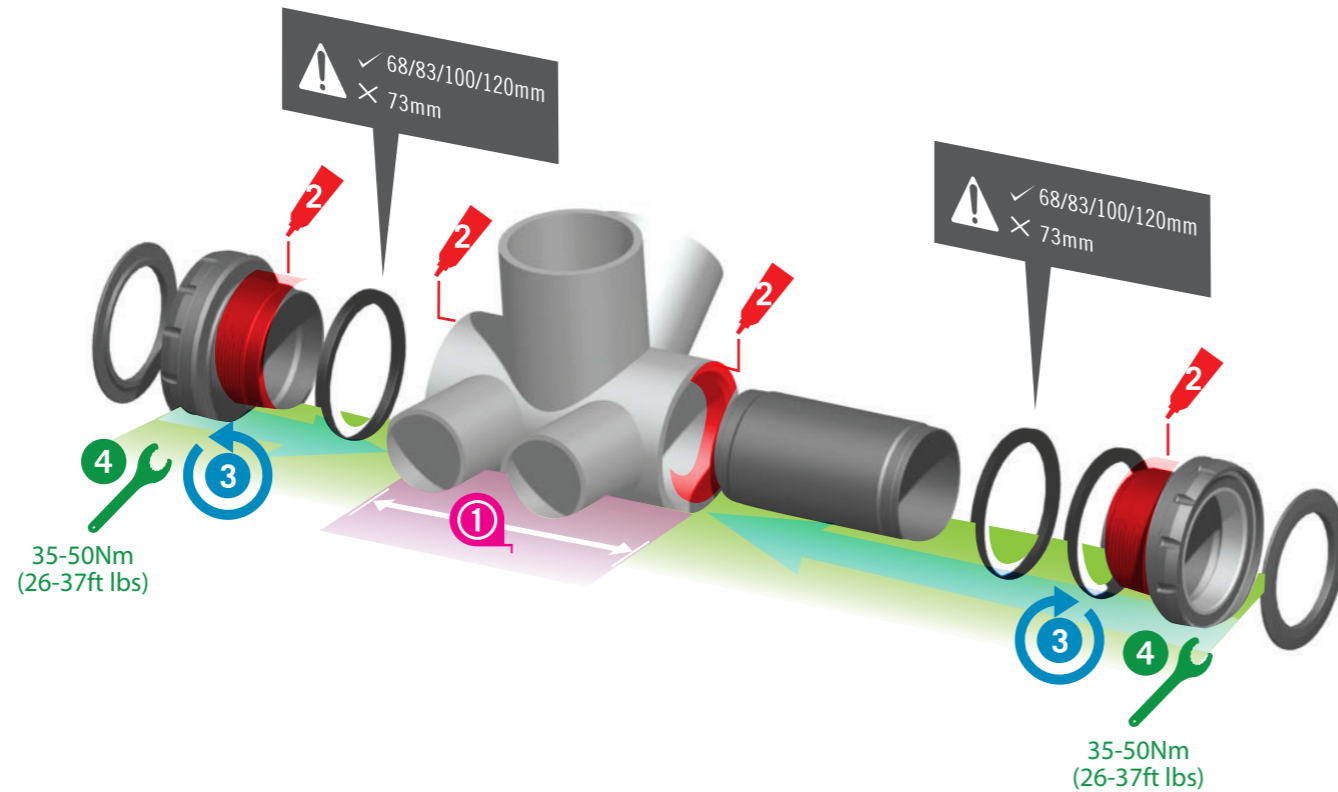

ADDITIONAL SPINDLE SPACERS FOR PLUSBIKES & FATBIKES

BB Shell Type	RF 30mm Spindle Length	Drive Side Spindle Spacers	Non-Drive Side Spindle Spacers
BSA 68/73mm	143.5mm (RF143)	4.5mm	4.5mm
BSA 100mm	169.5mm (RF169)	1.5mm	1.5mm
BSA 120mm	189.5mm (RF189)	1.5mm	1.5mm

1 MEASURE
Messen
Medir
Mesurer

SHELL + 0.25mm
TOLERANCE - 0.75mm

2 GREASE
Fett
Engrasar
Graisser

3 THREAD
Einschrauben
Enroscar
Visser

4 TORQUE
Anziehmoment
Apretar
Serrer

RF BSA 30 TOOL

PLEASE CHECK RACEFACE.COM FOR THE LATEST UPDATES

B30067-B